

Aufbauanleitung "TAGENA": Hängeregal

VENJAKOB


Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bitte beachten Sie auch bei den Wandmontageelementen die max. Belastungswerte. Die Wandbeschaffenheit ist idealerweise bei Auftragserfassung zu erfragen und spätestens vor der Montage unbedingt von fachkundigem Personal zu prüfen. Bei abweichender Beschaffenheit (z.B. Leichtbauwänden) ist eine andere, der Belastung angemessene Befestigung bauseits vorzunehmen. Klären Sie elektrische Vorleistungen für Anschluss- und Gerätetechnik. Frei hängende Beleuchtungen erfordern Kabelkanallösungen auf oder unter Putz.

Diese Montageanleitung gilt für folgende Bestell-Nummern (maximale Belastbarkeit in Klammern):
8215 (5kg), 8216 (5kg), 8217 (5kg)

1. Die genaue Position der Hängetype an der Zimmerwand definieren.
2. Bohrmaße für Aufhängeschienen gemäß Abbildung 1 (Type 8215 L/R) oder Abbildung 2 (Type 8216/8217) an Zimmerwand übertragen. Bohrung Ø8mm in das Mauerwerk bohren und Kunststoffdübel Ø8x51mm (Teile-Nr.50802) einsetzen. Aufhängeschiene (2x oben Teile-Nr.50814 und 1x unten Teile-Nr.50404) mit je zwei Schrauben 5x50mm (Teile-Nr.00055) anschrauben.
3. Zusatzartikel Beleuchtung: → siehe Aufbauanleitung "Anschlussplan Beleuchtung"
4. Höhenstellschraube des unteren Beschlages herausdrehen und Paneel auf die oberen Aufhängeschienen hängen.

Ausrichtung mit der Wasserwaage:

5. Eine horizontale Korrektur kann mit der Höhen-Stellschraube am Hängebeschlag vorgenommen werden. Hierfür Innensechskant SW4 verwenden.

6. Die Höhenstellschraube des unteren Hängebeschlages soweit eindrehen, dass der Hängebeschlag unter die Hängeschiene (Teile-Nr. 50404) greift = Aushängesicherung!



Achtung: Alle Beschläge aus Gründen der Tragfähigkeit gleichmäßig ausrichten und belasten!
Maximale Belastbarkeit der Hängetypen beachten!
Bei nicht sachgerechter Montagegemäß Montageanleitung droht ein unbeabsichtigtes Herabfallen der Möbel.




Abbildung 1: Position der Hängebeschläge Hängeregal 8215 L/R

Alle Angaben in mm!



Abbildung 2: Position der Hängebeschläge Hängeregal 8216/8217

Alle Angaben in mm!

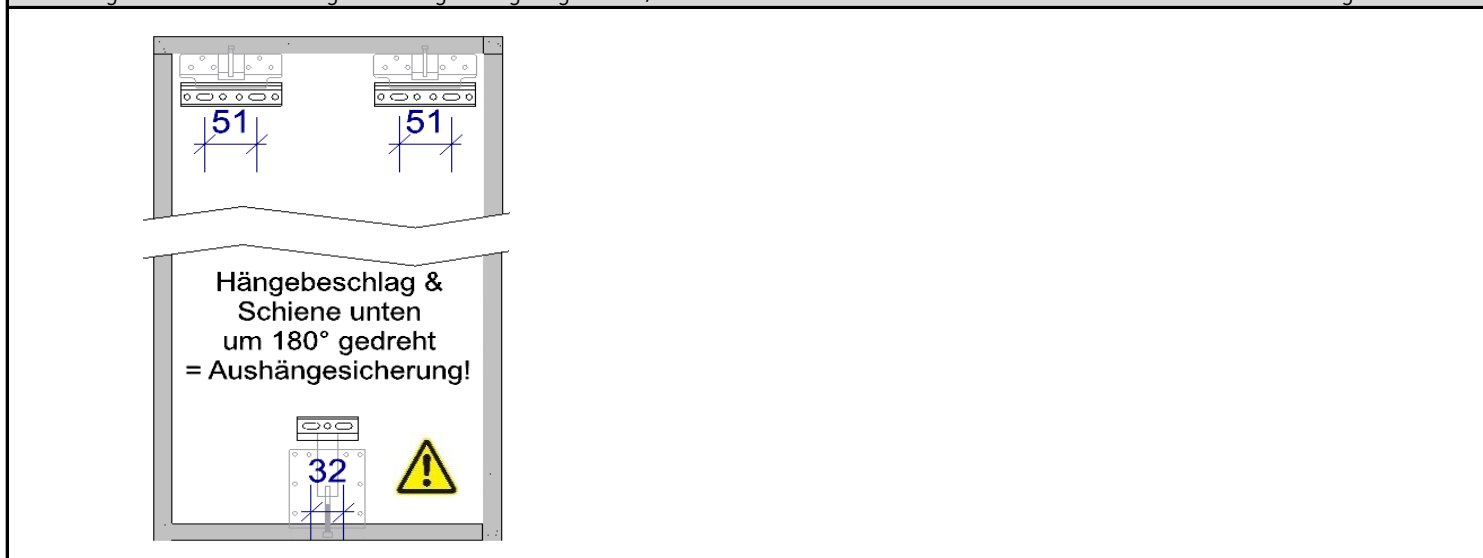

Assembly instructions "TAGENA": Wall shelf

VENJAKOB


The fixture materials provided with this product (dowels and screws) are only suitable for fixing parts to concrete and/or solid masonry. Please observe the maximum load that the wall-mounted elements can carry. Ideally, the suitability of the wall should be enquired about when the order is made and must be checked by specialist staff before the cabinet is assembled at the latest. If the condition of the wall is not suitable (e.g. if it is a lightweight partition wall), then another type of fixture suitable for the load that is to be carried should be used. Check the electrical input of any connection or device technology. Free-hanging light fixtures require cable duct solutions that are either on or under plaster.

These assembly instructions are valid for the following order no. (maximum load capacity in brackets):

8215 (5kg), 8216 (5kg), 8217 (5kg)

1. Define the exact position of the suspension unit on the room wall.
2. Transfer the drilling dimensions for suspension rails to the room wall as shown in fig. 1 (model 8215 L/R) or fig. 2 (model 8216/8217). Drill a hole Ø8mm in the masonry and insert the plastic dowel Ø8x51mm (Part No.50802). Screw on the suspension rail (2x top Part No.50814 and 1x bottom Part No.50404) with two 5x50mm screws (Part No.00055).
3. Lighting (additional part): → see assembly instructions "wiring diagram"
4. Unscrew the height adjustment screw of the lower fitting. Hang the shelf on the upper suspension rails.

Alignment with the spirit level:

5. Horizontal correction must be made using the height adjustment screw with allen key SW4 on the suspension fitting.

6. Screw in the height adjustment screw of the lower suspension fitting so that the suspension fitting engages under the suspension rail (Part No. 50404). = secured against detachment!



Warning: For reasons of load-bearing capacity, align and load all fittings evenly.

Observe the maximum load capacity of the suspension units!

If suspension units are not fitted correctly in accordance with the assembly instructions, there is a risk of the units falling down unintentionally!



Fig. 1: Positions of fittings for model 8215 L/R

All information in mm

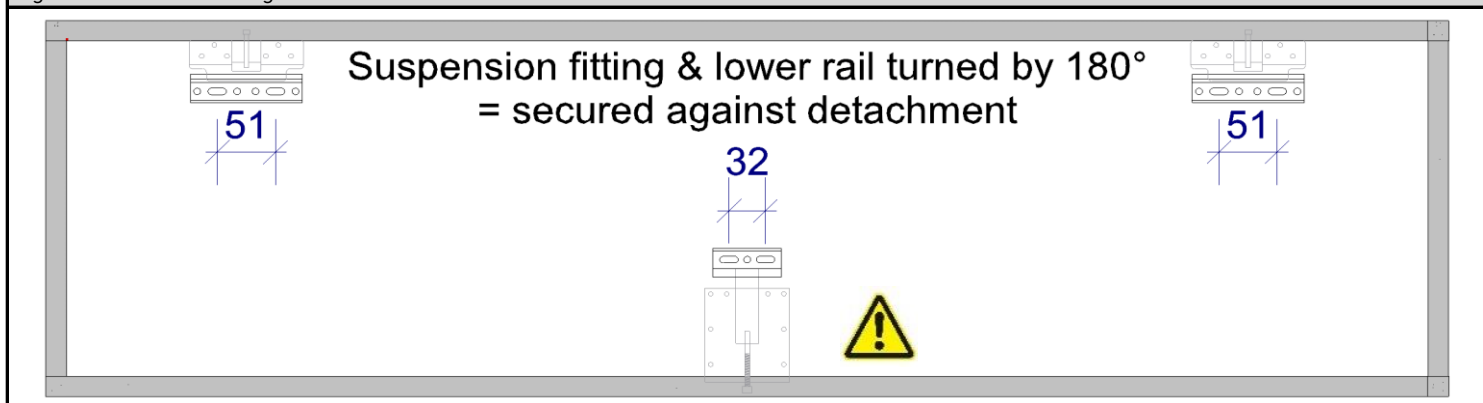


Fig. 2: Positions of fittings for model 8216/8217

All information in mm

