

Aufbauanleitung "ANDIAMO 3.0": Standelemente mit Sockelfüße

VENJAKOB



Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festem Mauerwerk geeignet. Bitte beachten Sie auch bei den Wandmontageelementen die max. Belastungswerte. Die Wandbeschaffenheit ist idealerweise bei Auftrags- erfassung zu erfragen und spätestens vor der Montage unbedingt von fachkundigem Personal zu prüfen. Bei abweichender Beschaffenheit (z. B. Leichtbauwänden) ist eine andere, der Belastung angemessene Befestigung bauseits vorzunehmen. Klären Sie elektrische Vorleistungen für Anschluss- und Gerätetechnik. Frei hängende Beleuchtungen erfordern Kabelkanallösungen auf oder unter Putz.

Diese Aufbauanleitung ist gültig für folgende Bestell-Nummern:

Lowboard: 7711, 7712, 7713, 7714, 7715, 7717, 7718, 7719, 7720, 7721, 7722, 7723, 7724, 7725, 7726 | **Sideboard:** 7735, 7736, 7737, 7738, 7739, 7740, 7742, 7743, 7744, 7745, 7746, 7747, 7749, 7750, 7751, 7758, 7752, 7753, 7754, 7755, 7757 | **Highboard:** 7760, 7761, 7762, 7763, 7764, 7765, 7766, 7767, 7768, 7769, 7770, 7771, 7772 | **Vitrine:** 7775, 7776, 7779, 7781, 7783, 7785, 7786, 7787, 7788


Maximale Belastbarkeit:

Einlegeboden: 15kg | Glasboden: 5kg | Schubkasten: 5kg


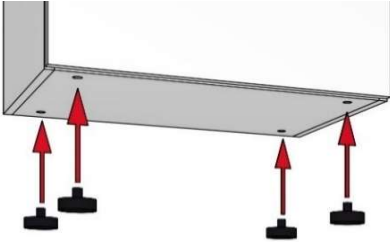


1. Transportschutz unterhalb des Sockelbodens abschrauben und entsorgen. Stellfüße / Möbelgleiter (Teile-Nr. 50611) mit dem Zapfen in den Sockelboden setzen.

Alle Excenter auf festen Sitz prüfen, ggf. nachziehen und das Kastenmöbel auf einem festen und ebenen Untergrund platzieren.

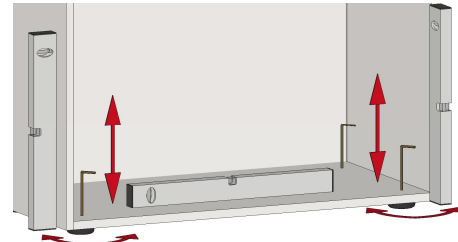


2. Ggf. Frontteile (Schubkästen, offene Fächer, Klappen, Türen) ausbauen. Möbelgleiter durch Drehen im Uhrzeigersinn auf den Nullpunkt stellen, horizontal und vertikal ausrichten. Korrekturen von innen mittels Inbusschlüssel SW4 oder von außen mit Hand vornehmen. Löcher im Sockelboden mit Abdeckkappen ø10mm (Teile-Nr. 50422-01-xx) schließen.

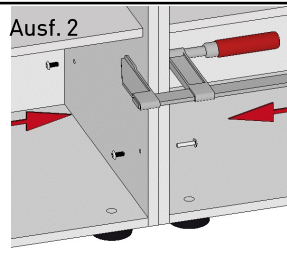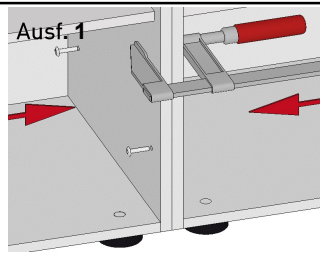

3. Verbindung Korpusseiten (zwei Ausführungen möglich!):


Ausführung 1 (linke Darstellung): Mit Tellerkopfschraube 4x30mm (Teile-Nr. 51458 oder 51266), wenn nur einseitig vorgebohrt ist.

Ausführung 2 (rechte Darstellung): Mit Möbelschraube M4x10mm / M4x15mm (Teile-Nr. 51203 / 51283) und Gewindeendhülse M4x27mm / M4x22mm (Teile-Nr. 51290 / 51285), wenn beide Seiten durchgebohrt sind, bzw. vorgebohrte Löcher bauseits mit Bohrer Ø 5mm durchbohren (gegen Ausrisse Holzstück o. Ä. gegenlegen).

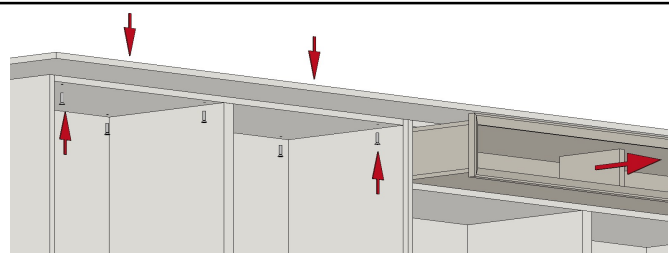


4. Deckblattmontage (sofern nicht vormontiert): Deckblatt von innen mit Möbelschraube M4x20mm (Teile-Nr. 51254 oder 51264) festschrauben. Im Bereich des offenen Faches Senkschraube M4x20 mm (Teile-Nr. 51248) verwenden! Achtung: Offene Fächer im oberen Bereich unbedingt vor Deckblattmontage ausbauen!

5. Zusatzartikel Beleuchtung: → siehe Aufbauanleitung "Anschlussplan Beleuchtung"

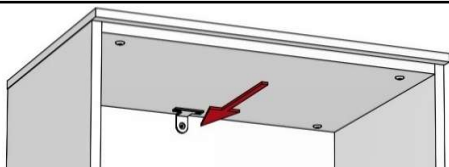

Variante 6.A

Bei Nichtverwendung der Kippsicherung gemäß Montageanleitung droht ein unbeabsichtigtes Umkippen der Möbel!

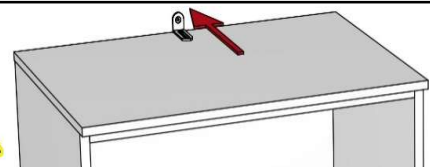

Variante 6.B

oder
(Lowboards ohne Kippsicherung)

6.A Kippsicherung innen (Möbelhöhe ca. 72-140cm): Mit kleinem Bohrer durch vormontierten Winkel und Rückwand bohren, um Bohrposition am Mauerwerk zu markieren. Ø 8mm Bohrung in Mauerwerk bohren. Dübel 8x51mm (Teile-Nr. 50802) verankern. Mit Spanplattenschraube 5x70mm (Teile-Nr. 00210) befestigen.

6.B Kippsicherung außen (nur Möbelhöhe ca. 208cm): Set "Wandbestigung" (Teile-Nr. 50570) verwenden. Anbringung oben auf dem Deckblatt.

7. Griffe (Teile-Nr. 51123-01-xx) mit Möbelgriffschraube M4x23mm (Teile-Nr. 51251 oder 51265) befestigen, Fronten einsetzen, ggf. offene Fächer wieder einbauen und Zierkappen (Teil 50620) auf Türscharniere klipsen. Excenter ohne Bund mit Abdeckkappe ø18mm (Teile-Nr. 50430-01-xx) verschließen.

Assembly instructions "ANDIAMO 3.0":

Cabinet with feet

VENJAKOB



The fixture materials provided with this product (dowels and screws) are only suitable for fixing parts to concrete and/or solid masonry. Please observe the maximum load that the wall-mounted elements can carry. Ideally, the suitability of the wall should be enquired about when the order is made and must be checked by specialist staff before the cabinet is assembled at the latest. If the condition of the wall is not suitable (e.g. if it is a lightweight partition wall), then another type of fixture suitable for the load that is to be carried should be used. Check the electrical input of any connection or device technology. Free-hanging light fixtures require cable duct solutions that are either on or under plaster.

These assembly instructions are valid for the following order no.:


Lowboard: 7711, 7712, 7713, 7714, 7715, 7717, 7718, 7719, 7720, 7721, 7722, 7723, 7724, 7725, 7726 | **Sideboard:** 7735, 7736, 7737, 7738, 7739, 7740, 7742, 7743, 7744, 7745, 7746, 7747, 7749, 7750, 7751, 7758, 7752, 7753, 7754, 7755, 7757 | **Highboard:** 7760, 7761, 7762, 7763, 7764, 7765, 7766, 7767, 7768, 7769, 7770, 7771, 7772 | **Cabinet:** 7775, 7776, 7779, 7781, 7783, 7785, 7786, 7787, 7788

Maximum load-bearing capacity:



wood shelf: 15kg | glass shelf: 5kg | drawer: 5kg

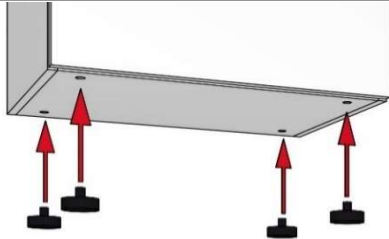

1. Unscrew the transport protection from beneath the base. Place the adjustable feet / furniture gliders (part no. 50611) with the dowels in the base. Check that all the eccentrics are firmly seated, retighten if necessary and place the cabinet onto a stable and level floor.

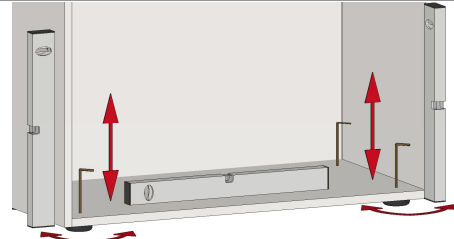


2. Remove front parts (e.g. drawers, open compartments, doors). Set the furniture gliders to the zero point by turning them in a clockwise direction and then adjust them vertically and horizontally. Make any other adjustments from the inside with an Allen key or from the outside by hand. Cover drilling holes in base plate with cover caps $\varnothing 10\text{mm}$ (part no. 50422-01-xx).

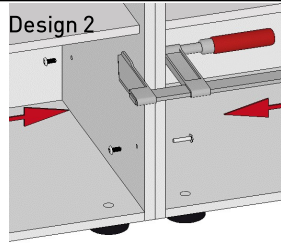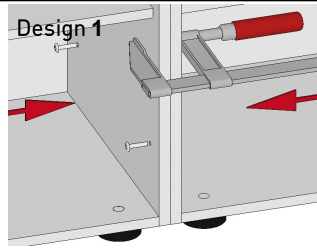

3. Connection of carcass sides (two designs possible!):

Design 1 (left picture): If predrilled from one side / not predrilled use wafer head screws 4x30mm (part no. 51458 or 51266)


Design 2 (right picture): Fix the side panels with furniture screws M4x10mm / M4x15mm (part no. 51203 / 51283) and thread end sleeves M4x27mm / M4x22mm (part No. 51290 / 51285), if both side panels are predrilled or drill through the pre-drilled holes with a $\varnothing 5\text{mm}$ drill (place a piece of wood or similar to prevent tearing).

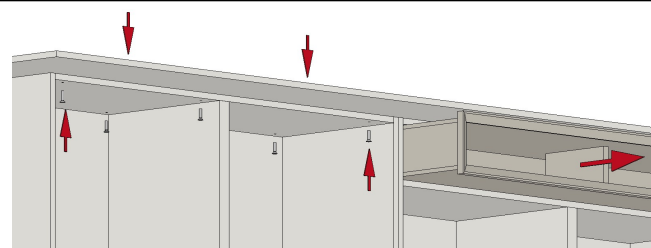

4. Overlay assembly:


Firmly screw the overlay into place from inside with M4x20 mm furniture screws (Part no. 51254 or 51264). Use M4x20mm counter-sunk screws (part no. 51248) in sections with open compartments. Please note: Open compartments in the upper part must be removed before the overlay is added!

5. Additional item lightning → See assembly instruction "Wiring diagram"

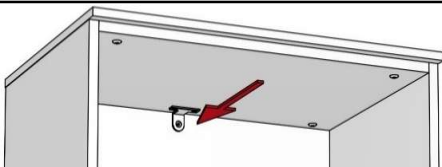

Design 6.A

Failure to use the anti-tip device in accordance with the assembly instructions may result in the furniture inadvertently tipping over!

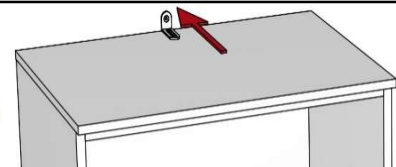

Design 6.B

or
(Lowboards with no anti-tip protection)

6.A Inner anti-tip protection (furniture height 72-140cm):

Drill through pre-assembled bracket and back panel with small drill bit to mark the drilling position on the masonry. Drill $\varnothing 8\text{mm}$ holes in the masonry. Anchor 8x51mm dowels (part no. 50802). Fasten into place with 5x70mm chipboard screws (part no. 00210).

6.B Outer anti-tip protection (only furniture height 208cm):

Use "Wall fastening" set (part no. 50570). Affix to the top of the overlay.

7. Fasten handles (part no. 51123-01-xx) with furniture handle screw M4x23mm (part no. 51251 or 51265), insert fronts, refit open compartments if necessary and clip decorative caps (part no. 50620) onto door hinges. Close eccentrics without collar with cover cap $\varnothing 18\text{mm}$ (part no. 50430-01-xx).